



EUROPEAN MORTISE MOUNTING

R-SERIES - M300 SERIES





PASSAGE M300 2" BACKSET

PRIVACY M340 2" BACKSET

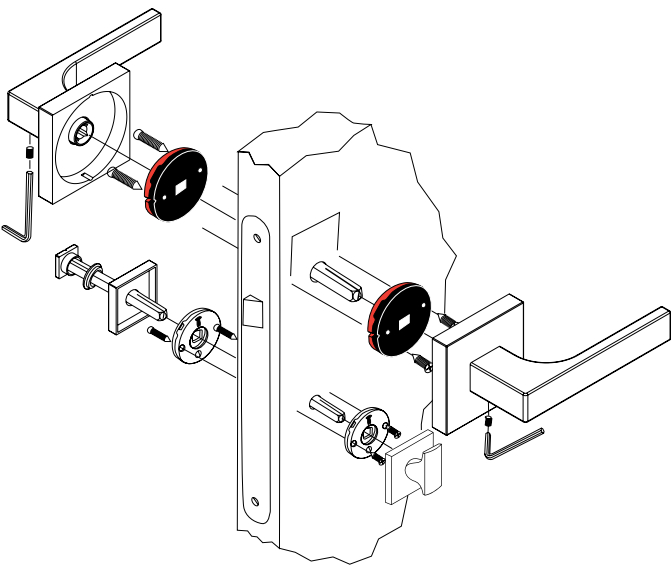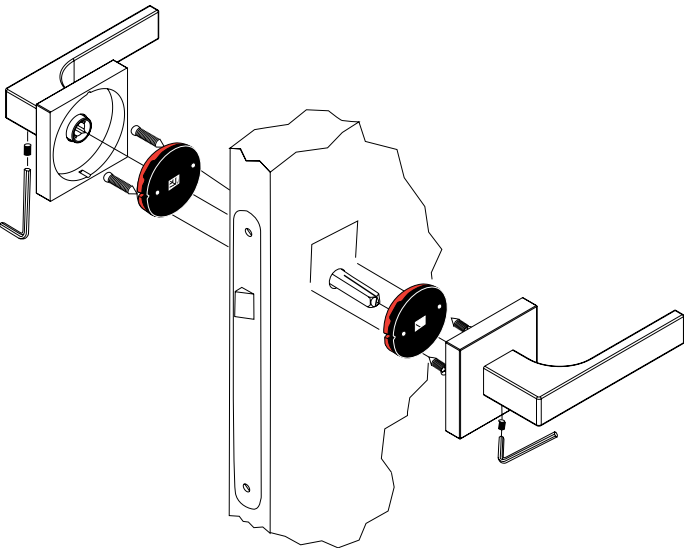

KEYLOCK M350 2" BACKSET

HD KEYLOCK HDM350 2" BACKSET

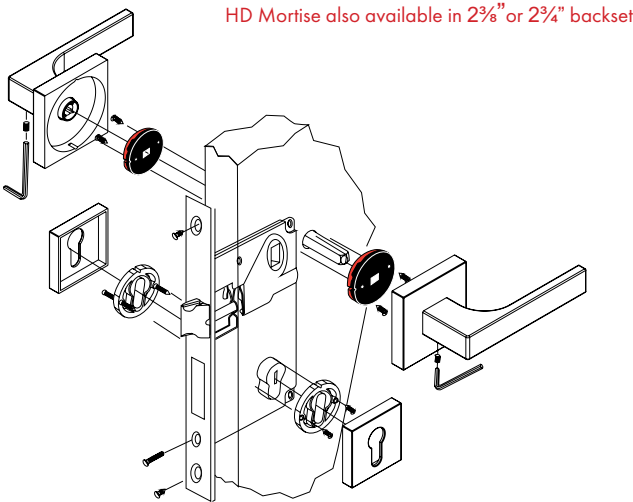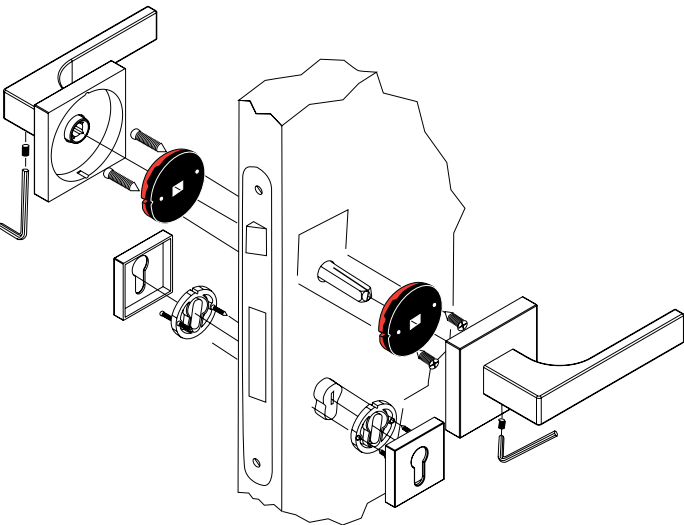

HD Mortise also available in 2 3/8" or 2 3/4" backset

All levers with square back plates,
include square escutcheon plates for keylock sets


Sample Specification
for a "ROBOCINQUES" Euro-Mortise Privacy 2" backset
Lever - ID71 R-M340 - Satin Chrome
Function └───┐
Finish └───┐

M300 MORTISE ONLY AVAILABLE IN 2" BACKSET.
POLISHED CHROME, POLISHED BRASS, AND SATIN CHROME FINISHES ONLY.

DOUBLE DUMMY D190

/


SINGLE DUMMY D185

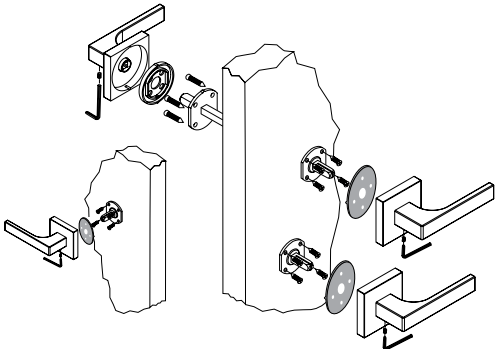

Left hand Right hand

INSTALLATION INSTRUCTIONS FOR PASSAGE EURO MORTISE LOCK R M300 - non-bored door condition

Euro Passage Mortise

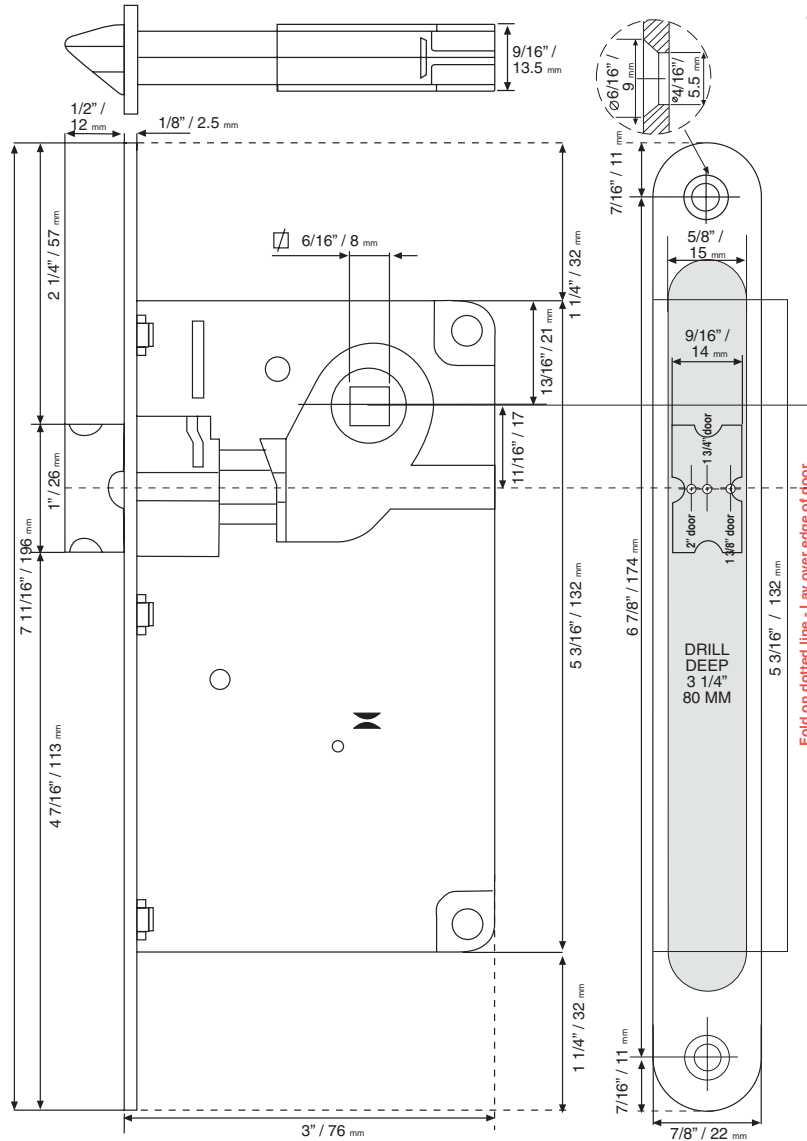




TOOLS REQUIRED:
5/8 Dia. Drill Bit, 5/8 Router Bit for Pocket,
7/8 Router Bit for face plate and Phillips Screwdriver.

Passage Strike

IMPORTANT:
REVIEW DIAGRAMS CAREFULLY
BEFORE PREPARING DOOR

2" / 50 mm BACKSET TEMPLATE
 POINT NO. 2 (face bore)


STRIKE TEMPLATE

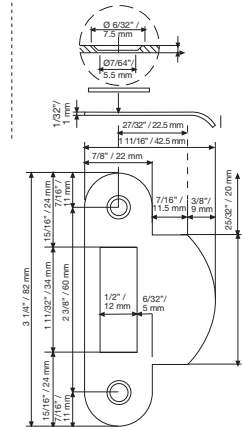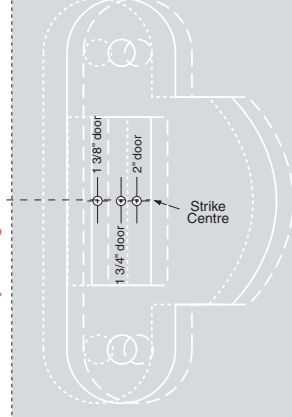

PLEASE NOTE

Springs are handed. **Black** must be facing you for **Right Hand Lever**. **Red** for **Left Hand Lever**.

PARTS INCLUDED WITH YOUR NEW PASSAGE LOCK

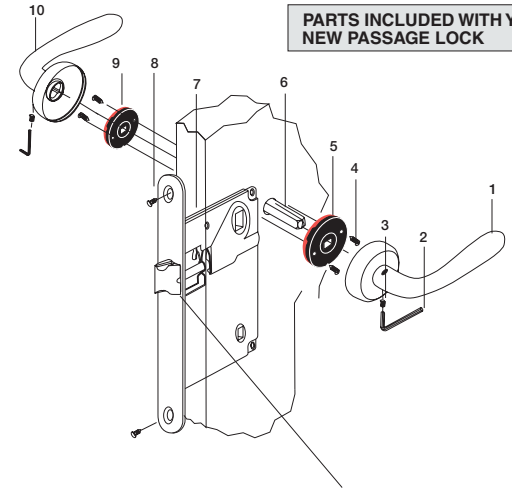

Passage Parts


1. Right Hand Lever Handle (inside)
2. Allen Key
3. Handle Set Screw (2)
4. Screws #8 (4)
5. Spring Pack (Right Hand Inside Shown)
6. Passage Spindle
7. Passage/Privacy Euro Mortise
8. Face Plate Screws (2)
9. Spring Pack (outside)
10. Left Hand Lever Handle (outside)

To Reverse Latch:

1. Lift up stopper (A).

2. Push in latch beyond face plate.


Rotate latch 180° until it is in the reverse position.

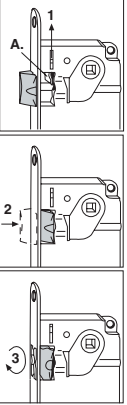

Template #004 - RH

INSTALLATION INSTRUCTIONS FOR PRIVACY EURO MORTISE LOCK R M340 - non-bored door condition

Euro Privacy Mortise

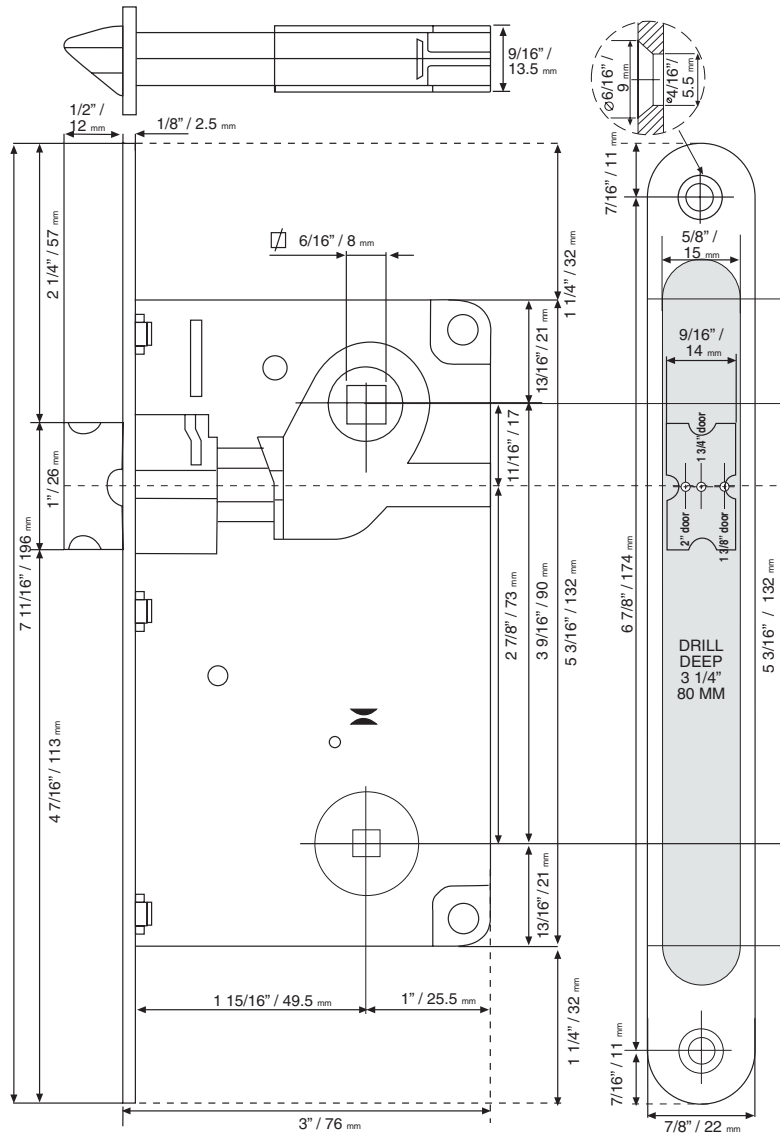

TOOLS REQUIRED:
5/8 Dia. Drill Bit, 5/8 Router Bit for Pocket,
7/8 Router Bit for face plate and Phillips Screwdriver.



Privacy Strike

IMPORTANT:
REVIEW DIAGRAMS CAREFULLY
BEFORE PREPARING DOOR

2" / 50 mm BACKSET TEMPLATE
 POINT NO. 2 (face bore)

STRIKE TEMPLATE


Fold on dotted line - Lay over edge of door.

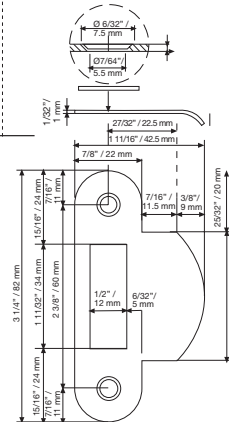

PLEASE NOTE

Springs are handed. **Black** must be facing you for **Right Hand Lever**. **Red** for **Left Hand Lever**.

PARTS INCLUDED WITH YOUR NEW PRIVACY LOCK

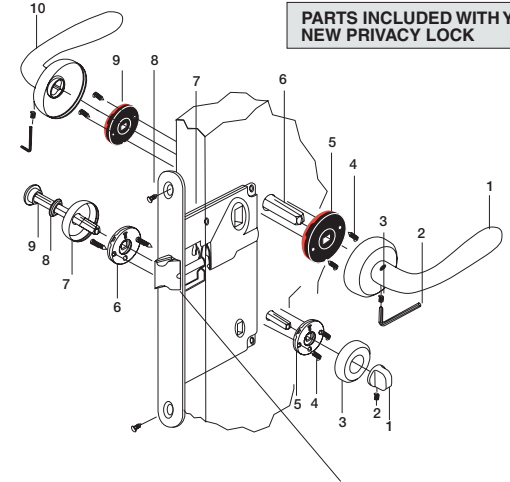

Passage Parts

1. Right Hand Lever Handle (inside)
2. Allen Key
3. Handle Set Screw (2)
4. Screws #8 (4)
5. Spring Pack (Right Hand inside Shown)
6. Passage Spindle
7. Passage/Privacy Euro Mortise
8. Face Plate Screws (2)
9. Spring Pack (outside)
10. Left Hand Lever Handle (outside)

Privacy Parts


1. Thumbturn (inside)
2. Thumbturn Set Screw
3. Rose (inside)
4. Screws #4 (4)
5. Springless Pack (inside)
6. Springless Pack (outside)
7. Rose
8. Washer
9. Emergency Release Spindle

To Reverse Latch:

1. Lift up stopper (A).

2. Push in latch beyond face plate.

Rotate latch 180° until it is in the reverse position.

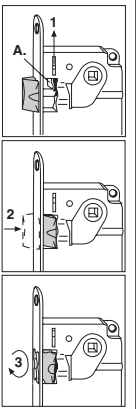

Template #005 - RH

Euro Keylock Mortise

Red side

Required hole positioning

Black side

PLEASE NOTE

Springs are handed. **Black** must be facing you for **Right Hand Lever**. **Red** for **Left Hand Lever**.

PARTS INCLUDED WITH YOUR NEW KEYLOCK LOCK

Keylock Strike

2" / 50 mm BACKSET TEMPLATE

POINT NO. 2 (face bore)

STRIKE TEMPLATE

Stroke Centre

Fold on dotted line - Lay over edge of door.

Passage Parts

1. Right Hand Lever Handle (outside)
2. Allen Key
3. Handle Set Screw (2)
4. Screws #8 (4)
5. Spring Pack
(Right Hand outside Shown)
6. Passage Spindle
7. Passage/Privacy Euro Mortise
8. Face Plate Screws (2)
9. Spring Pack (inside)
10. Left Hand Lever Handle (inside)

Locking Parts

1. Profile Escutcheon
2. Escutcheon Mounting Bracket
3. Profile Cylinder
4. Cylinder Screws
5. Screws
6. Escutcheon Mounting Bracket
7. Profile Escutcheon

To Reverse Latch:

1. Lift up stopper (A).
2. Push in latch beyond face plate.
3. Rotate latch 180° until it is in the reverse position.

Template #006 - RH

HDM350 HD EURO MORTISE KEYLOCK WITH 2" BACKSET TEMPLATE

For Non-bored door condition

HD Euro Mortise Keylock

TOOLS REQUIRED:
5/8 Dia. Drill Bit, 5/8 Router Bit for Pocket,
7/8 Router Bit for face plate and Phillips Screwdriver.

EURO MORTISE KEYLOCK HDM350 LATCH TEMPLATE

IMPORTANT:
REVIEW DIAGRAMS CAREFULLY
BEFORE PREPARING DOOR

2" / 50 mm BACKSET TEMPLATE
POINT NO. 2 (face bore)

LEVER BORE - 5/8"

PROFILE CYLINDER
BORE - 2 X 5/8"

Keylock Strike

STRIKE TEMPLATE

Strike

Centre

Fold on dotted line - Lay over edge of door.

PARTS INCLUDED WITH YOUR NEW HEAVY-DUTY KEYLOCK

Passage Parts

1. Right Hand Lever
2. Allan Key(2)
3. Lever Set Screw(2)
4. Lever Mounting Screws(2)
5. Passage Spindle
6. Passage/Privacy HD Euro Mortise
7. Left Hand Lever
8. Lever Mounting Screws(2)
9. Face Plate Screws(2)

Locking Parts

1. Right Hand Profile Escutcheon
2. Profile Esc. Mounting Screws
3. Profile Cylinder
4. Profile Cylinder Screw
5. Mortise Screws(2)
6. Left Hand Profile Escutcheon

To Reverse
Latch:
1. Lift up
stopper
(A).


2. Push in
latch
beyond
face plate.

3. Rotate
latch 180°
until it is
in the
reverse
position.

(05/10/18) Template #006E

Template for **DOUBLE DUMMY D190** - non-bored door condition


Determine backset

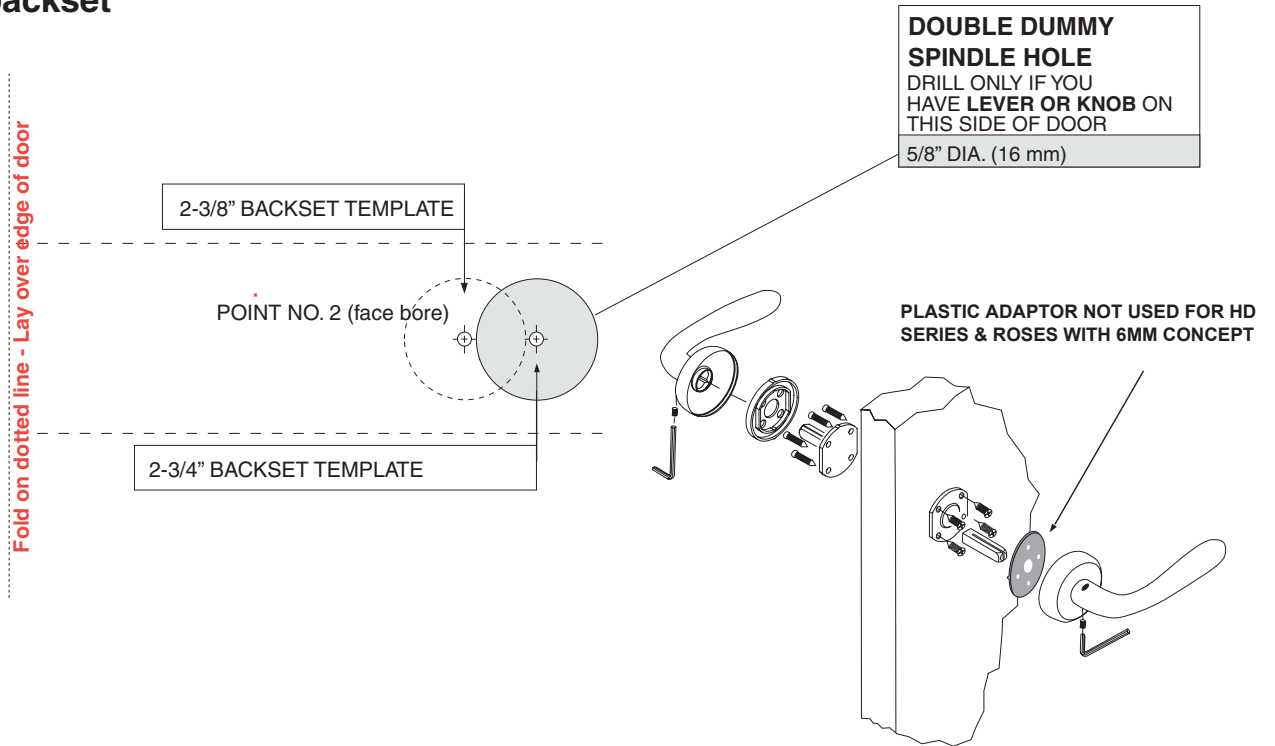

Template #011A

Template for **SINGLE DUMMY D185** - non-bored door condition

Determine backset

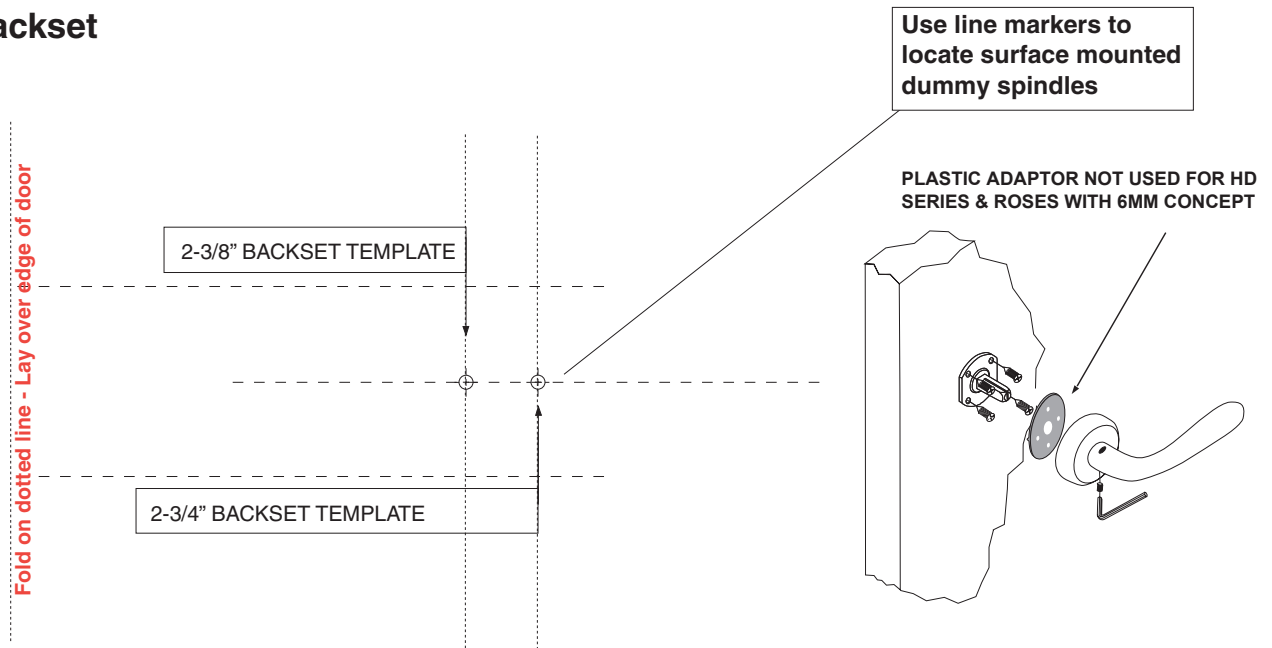

Template #011B